

Spacing washers

Item description/product images



Description

Material:

Carbon steel.


Version:

Tempered, black oxidised.


Contact faces ground.

Note:

The spacing washer is used to alter the clamping range of hook clamps and hook holders. When a spacing washer is inserted between the base and the hook holder or riser cylinder it prevents damage to the support face.

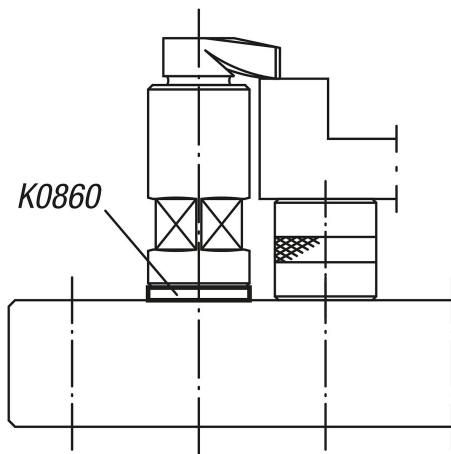

Drawings

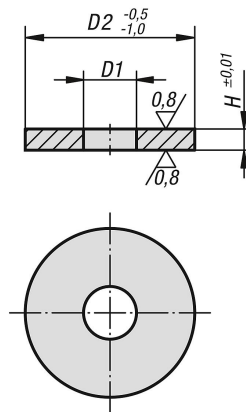

Overview of items

Spacer washers, ground

Order No.	D1	D2	H
K0860.08003	9	24	3
K0860.08005	9	24	5
K0860.08008	9	24	8
K0860.12001	12,5	40	1
K0860.12003	12,5	40	3
K0860.12005	12,5	40	5
K0860.16001	16,5	50	1
K0860.16003	16,5	50	3

Overview of items

Order No.	D1	D2	H
K0860.16005	16,5	50	5
K0860.16105	16,5	60	5